

Application Note:

SolarEdge Inverter Generator Compatibility with Home Hub + Backup Interface (BUI)

Version History

- Version 1.0 (June 2022) – Initial release
- Version 2.0 (December 2022) - Update with generator functionality and connections
- Version 3.0 (April 2023) – Enhanced generator functionality

Contents

- Introduction
- Manual Generator Compatibility Mode: System Requirements
- Functionality
 - I) Single Generator with pull start capability and temporary connection to the backup panel
 - II) Single Generator with manual start/transfer capability connected to the backup panel
 - III) Single Generator with pull start capability and temporary connection to the Backup Interface
 - IV) Single Generator with manual start capability hard-wired to the Backup Interface
 - V) Single Generator with 2-wire Automatic start, hard-wired to the Backup Interface
 - VI) Single Generator with external automatic transfer capability on the load side of the BUI

Introduction

Energy-generation systems (such as PV inverters) connected to the grid may consist of several types of energy-generating sources. In some cases, when grid power is disconnected, PV inverters should operate in parallel with other voltage sources, such as generators. In this document, “generator” is used as a general term for such sources. When inverters operate concurrently with generators, they may be subjected to voltage and frequency fluctuations that exceed trip limits, which are preset according to regional grid connection requirements.

To support the simultaneous or dynamic operation of the inverter with a generator, the inverter extends its voltage and frequency operating range once it receives a signal that the grid is unavailable, and the Backup Interface (BUI) islands the generation sources (“Backup mode”). Once the BUI has isolated the generation system from the grid, the relay that isolates the gas generator from the grid will close. *The gas generator will never be able to run in parallel with the grid.*

When grid power is restored, the gas generator relay opens, the inverter automatically reverts to its default country setting, which includes the original voltage and frequency operating range, and the Backup Interface closes the grid connection relay.

This document describes how to configure SolarEdge inverters for operation with a gas generator.

Supported SolarEdge Products

- The BUI with a manufacturing date of xx/xx or older
- The BUI is required for generator functionality, BI-Exxx or BI-Nxxxx, w/firmware version 1.0.35 and up
- Single Phase Home Hub inverter with CPU Version 4.15.199 and up
- BUI made before March 2022 and Firmware CPU version 4.17.33 is required for generators with 2-wire start capabilities
- BUI’s made after March 2022 require Firmware CPU version 4.19.xxx for generators with 2-wire start capabilities

System Requirements for Generators Connected to the Backup Panel

When generators are connected to the backup panel, it is usually a result of a pre-existing backup system. The generator is required to be isolated from the grid while operating. This can be done through a small, selected loads panel, interlock kit (Photo 1), or manual transfer switch that will **NOT** allow the generator to feed the grid or the energy storage system. The only drawback to the connection method is that the generator will not be able to charge the batteries. This generator connection method is considered an auxiliary backup system for the new PV + storage system. When the Backup Interface is utilized as the transfer switch, the inverter will be able to charge the batteries while the generator is operating, making it the preferred connection method.

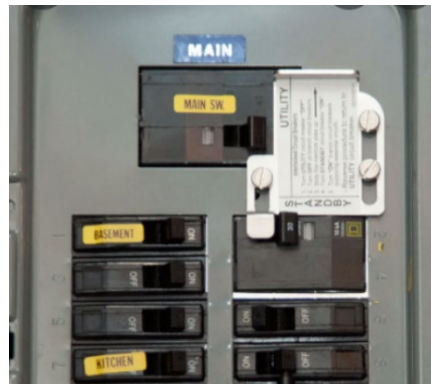


Photo 1


- **Pull start or portable generators:**
 1. The generator must be able to provide 240vac to the backup loads panel
 2. While the generator is operating, it must be in open air, and a minimum of 20 ft. from the home
- **Permanent or pad-mounted generators with a manual transfer:**
 1. The generator must be able to provide 240vac to the backup loads panel
 2. While the generator is operating, it must be in open air, and a minimum of 20 ft. from the home

Functionality

One or multiple transfer switches can be used to incorporate generators into the backup system. Depending on the mode of operation, the generator may operate independently or in conjunction with the energy storage system.


Generators with Pull Start Capability and Temporary Connection:

- This system setup is reserved for small, portable generators that lack a 2-wire start/stop capability. The typical operation of this style of system is to use solar and stored energy **OR** the generator. In this application, the generator works independently of the energy storage system, which consists of a Home Hub inverter(s), PV array, compatible battery, BUI, generator interconnection device, and a generator.

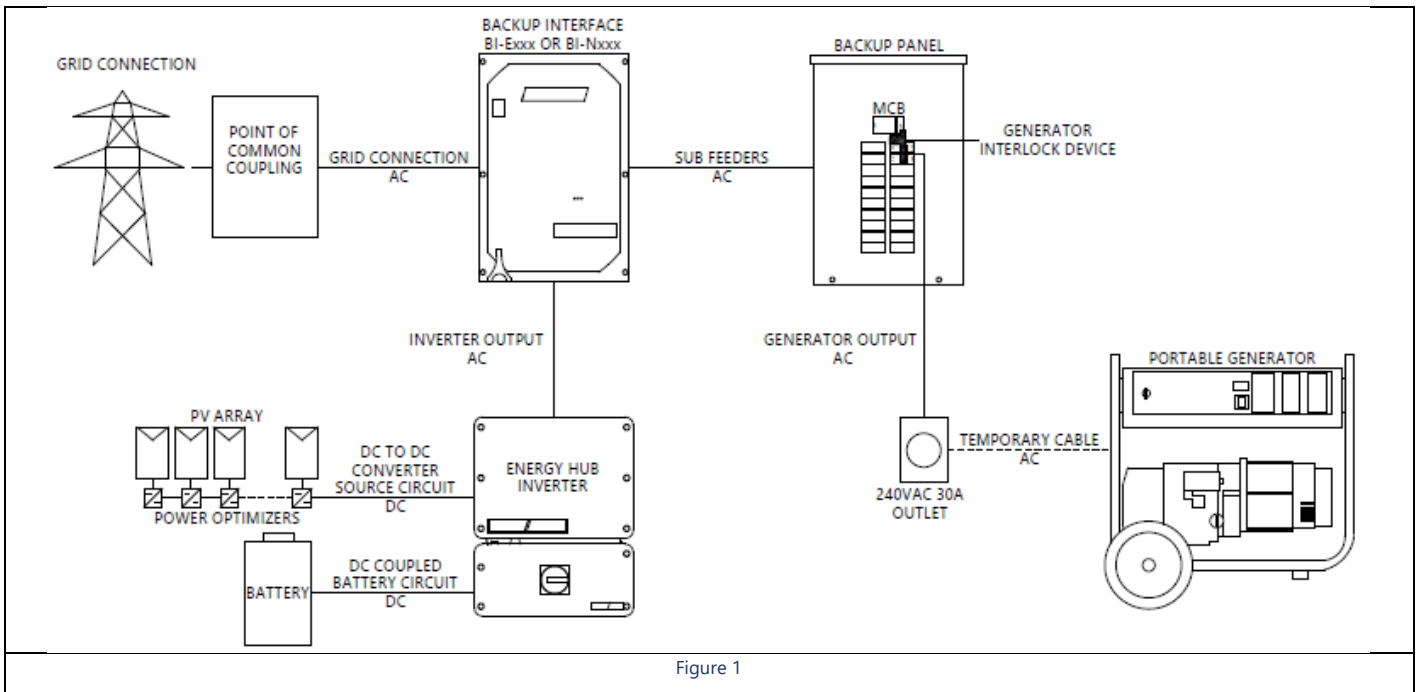

Generator With Manual Start and / or Manual Transfer Capability Connected to the BIU

If the generator is a standby generator with a manual transfer switch, it can be connected in the same manner using an interlock device or by connecting a manual transfer switch to the backed-up loads panel. These generators are usually pad-mounted and need to be run independently of the inverter(s). The main circuit breaker in the backup panel must isolate the loads and the PV generation system.

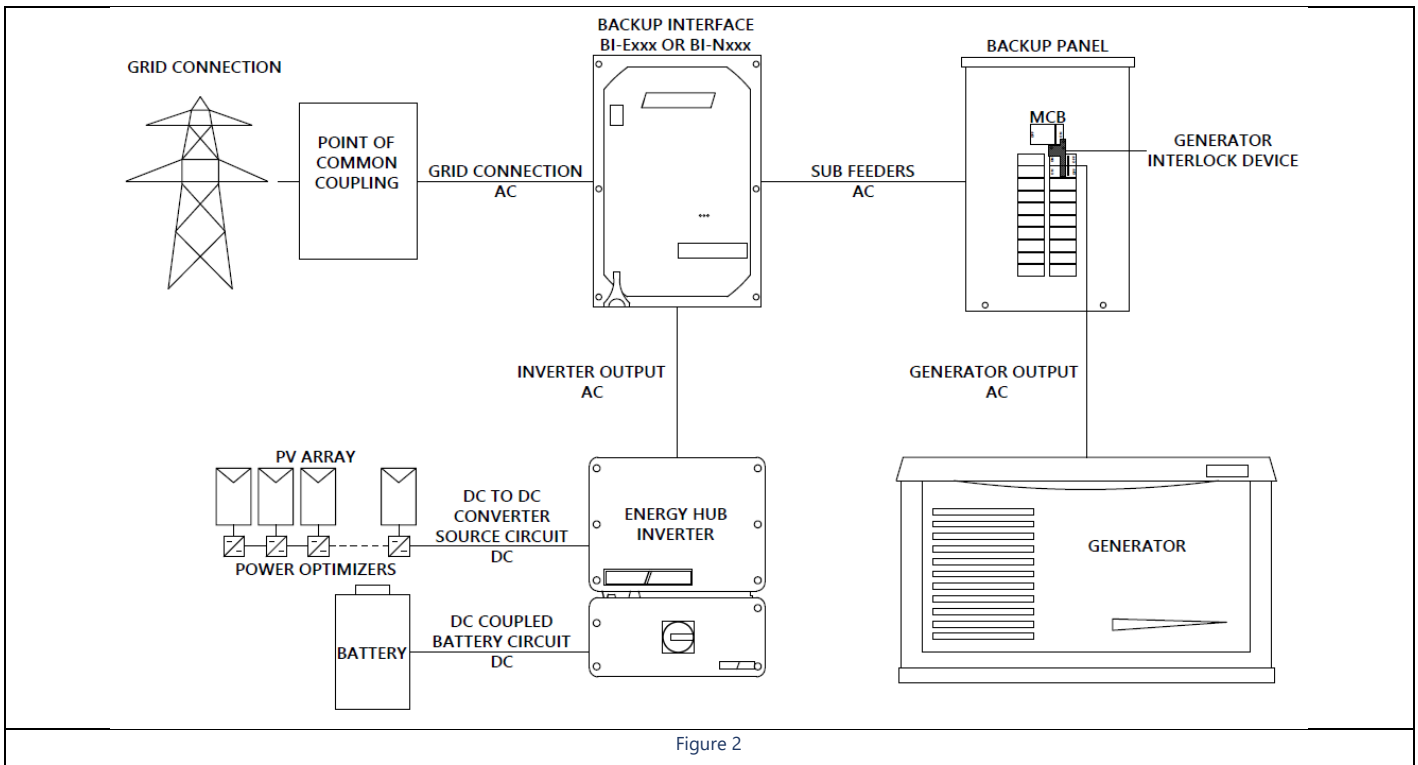

System Requirements for Generators Connected to the Backup Interface

For generators connected directly to the Backup Interface, the Backup Interface will provide the isolation of the generator to prevent it from co-producing with the grid. Therefore, the generator is always isolated from the grid while it is operating. The Home Hub inverter has an AC relay located internally. It will isolate the inverter from the generator while the generator is operating. This connection method considers the generator as an auxiliary backup system to the PV + Storage system. The inverter firmware needs to be at least 4.17.xx for this capability.

Generator with Pull-Start Capability and Temporary Connection to the Backup Interface

- This system setup is generally reserved for small portable generators or pad-mounted generators that lack a 2-wire start/stop capability. The Backup interface generator input is being utilized in this case. The typical operation of this style of system is to use solar energy and stored energy **OR** the generator. The capability of synchronous generation with the ESS and the generator will be available with future firmware versions. The system consists of a Home Hub inverter(s), PV Array, compatible battery, Home Backup Interface, and a generator.

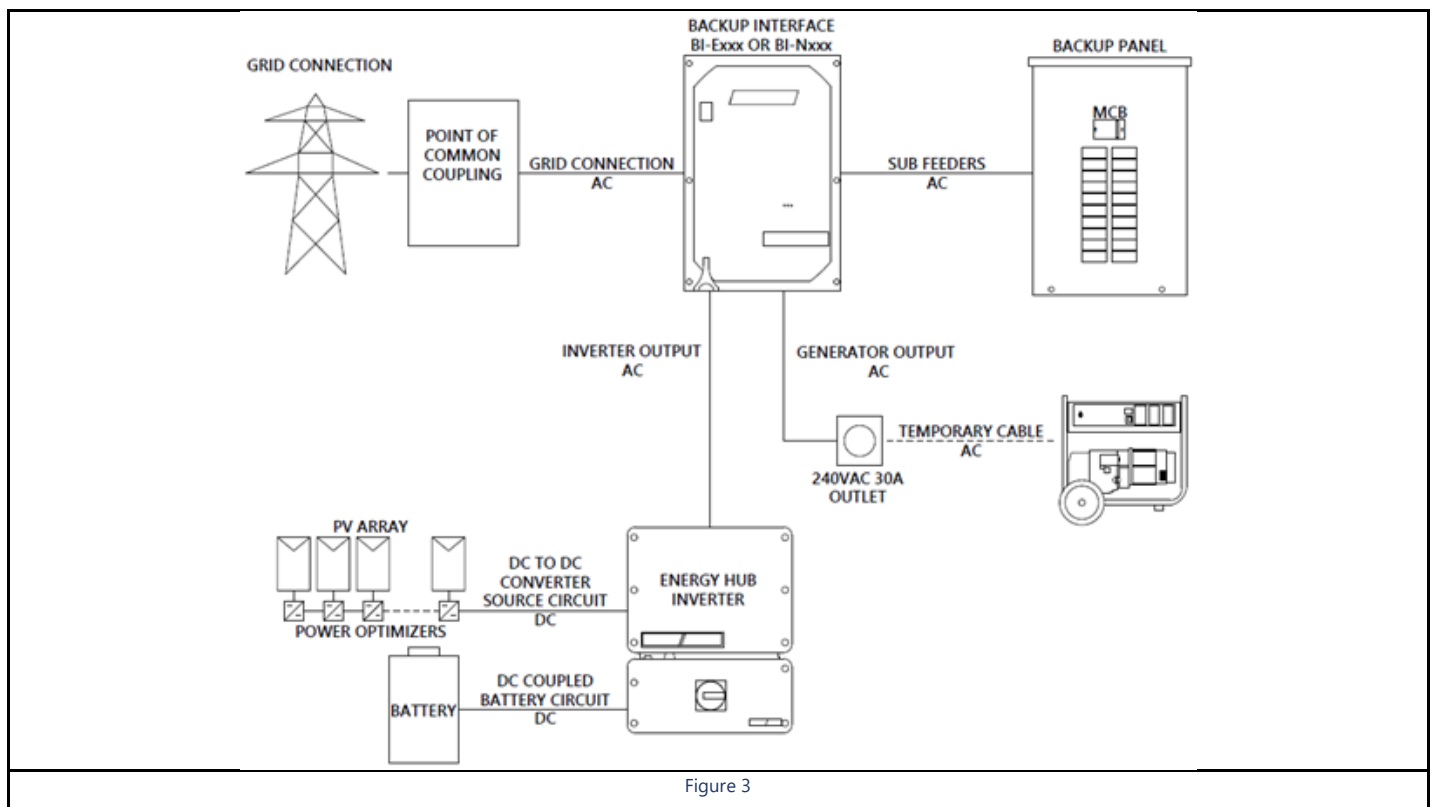


Figure 3

Pad Mounted Generator Connected to the Backup Interface

- This system setup is generally reserved for generators that lack a 2-wire start/stop capability. The Backup interface generator input is being utilized in this case. The typical operation of this style of system is to use solar energy and stored energy **OR** the generator. The capability of synchronous generation with the ESS and the generator will be available with future firmware versions. but offers the capability of co-generation with supporting firmware. The system consists of a Home Hub inverter(s), PV Array, compatible battery, Home Backup Interface, and a generator.

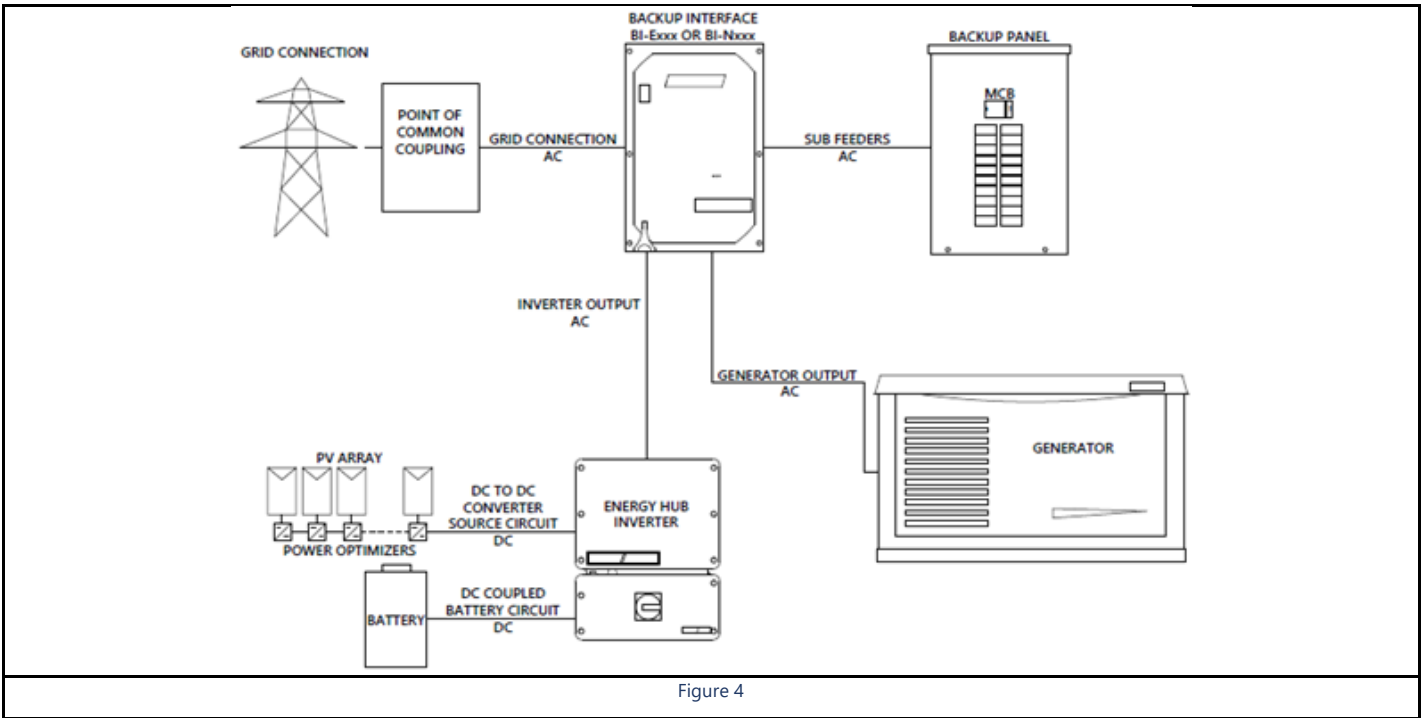


Figure 4

Pad Mounted Generator with 2-wire Start/Stop Connected to the Backup Interface

- This system setup is for generators that have a 2-wire start/stop capability. Check with the generator manufacturer to see if the required components can be added to the generator. The Backup interface generator input is being utilized in this case. The typical operation of this style of system is to use solar energy and stored energy **OR** the generator but offers the capability of co-generation with supporting firmware. The system consists of a Home Hub inverter(s), PV Array, compatible battery, Home Backup Interface, and a generator.

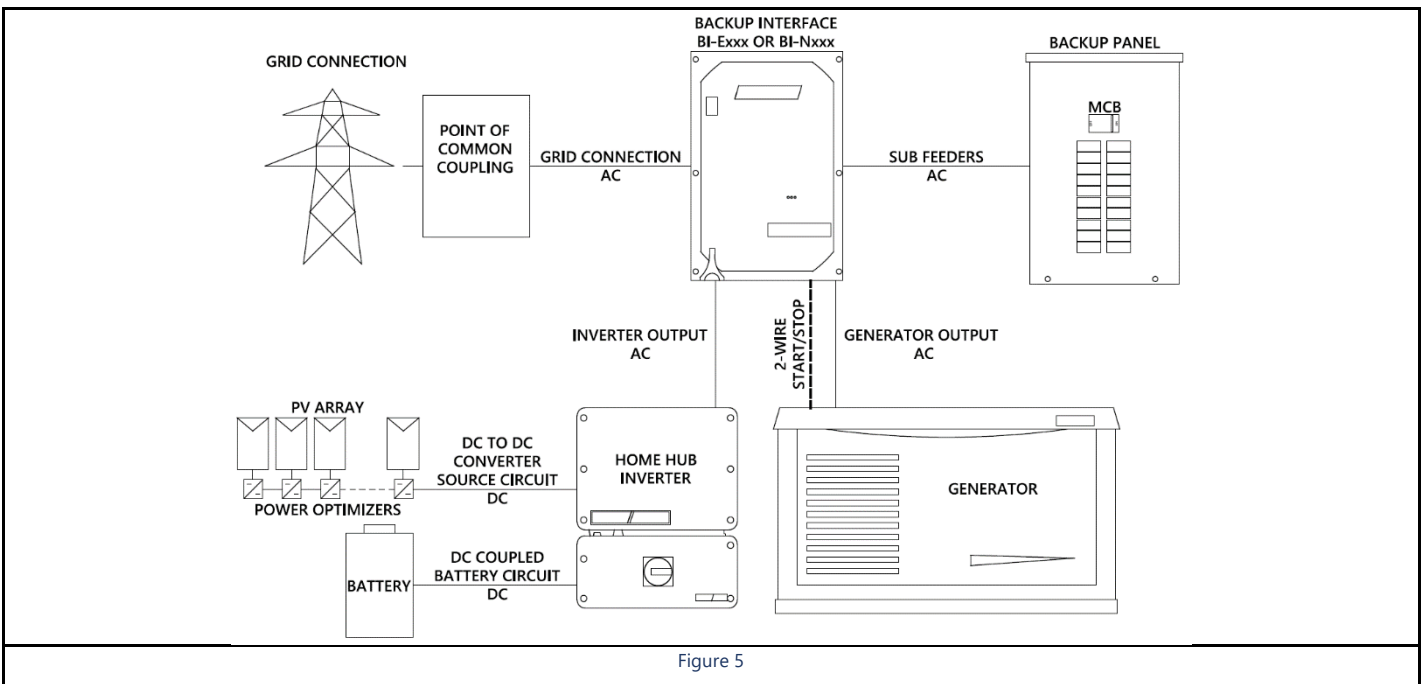


Figure 5

System Requirements When Connected to a 3rd Party “Auto Transfer Switch” on the Load Side of the BUI

In this system setup, the generator is electrically isolated from the grid, using a 3rd party relay or transfer switch that is normally open when connected to the grid. When the grid power goes down, the BUI will isolate the home loads and backup system from the grid. The generator will need to be programmed with a 10-second delay start. The required component for this system is a Home Hub inverter(s), PV array, compatible battery, BUI, 3rd party auto transfer switch, and a generator. The inverter will be isolated from the generator while the generator is operating, and the generator will not be able to charge the batteries. However, the batteries will charge from available PV, and the system will resume production once the batteries have reached a sufficient state of charge. In future FW versions, a voltage signal from the inverter will tell the generator to turn off, and the 3rd party auto-transfer switch will move back to “grid mode”.

Pad-Mounted Generator with “Auto-Start” Capability

The BUI is the primary backup control, and the generator is secondary. Generators with existing or new automatic transfer switches can be used with the BUI and Home Hub inverter to supply backup power to the home after the batteries have been depleted.

In this system setup, the generator is electrically isolated from the grid using an external ATS (Automatic Transfer Switch) with a voltage sensor. When the grid power goes down, the BUI will isolate the home energy storage system that provides power to the backup panel. If the batteries deplete, the generator's transfer switch will detect the loss of voltage and will start the generator. With this method, the generator will be electrically isolated from the Home Hub inverter and cannot be used to charge the batteries—it will only provide backup power to the home loads.

A key step in running the generator in this mode is to delay the automatic generator start by 10 seconds. This will ensure that the generator does not start while the inverters are operating. See the illustration below (Figure 6).

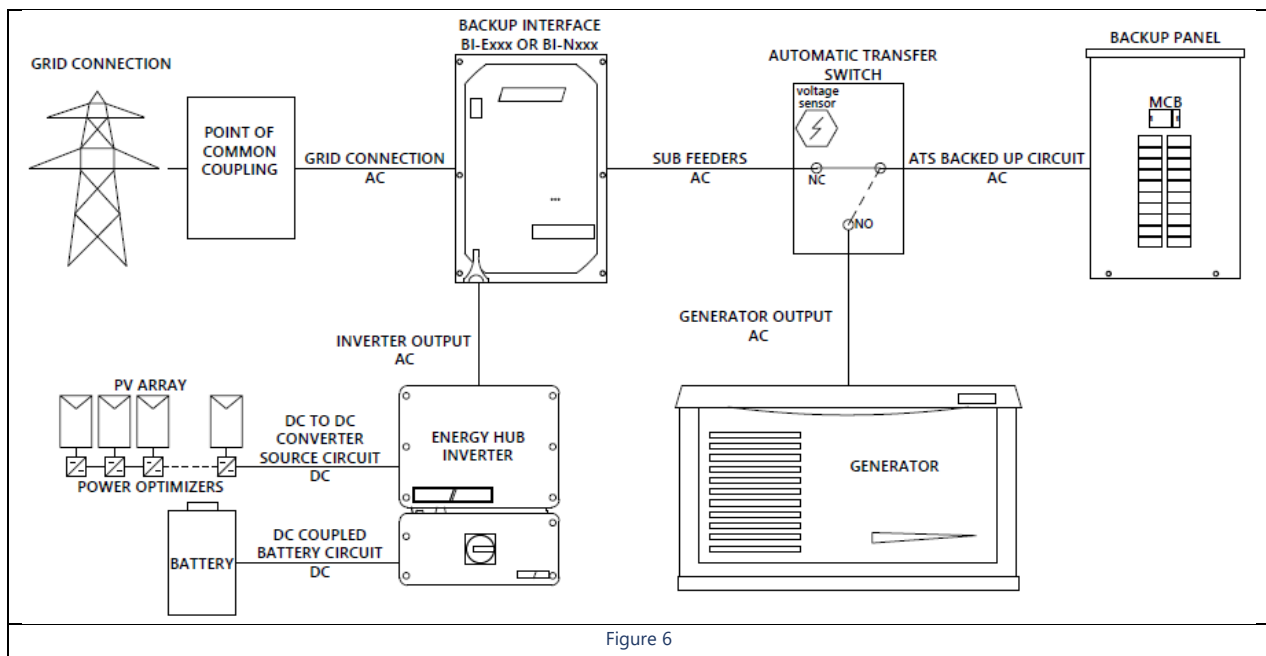


Figure 6

Operational Behaviors

This section describes how all the above system configurations will behave during a grid outage.

Generators Connected to the Backed-up Loads Panel with Manual Transfer Switches, or Interlock Devices

As soon as the grid goes down, the BUI will isolate from the grid, while the PV + storage system provides power to the backed-up loads. Here, the generator is on standby. Figure 7 indicates the flow of power in this state.

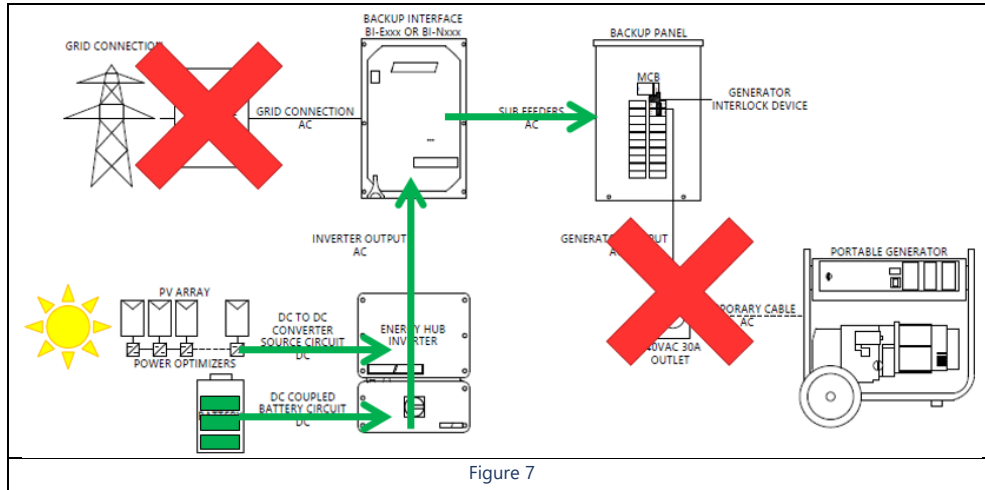


Figure 7

Once the batteries have been depleted and there is no PV production, the system operator will turn on the generator. The first step is to turn off the main breaker to the backed-up loads panel, move the interlock device, and turn on the breaker to the generator. The generator interlock will isolate the generator from the inverter. Figure 8 indicates the flow of power in this state.

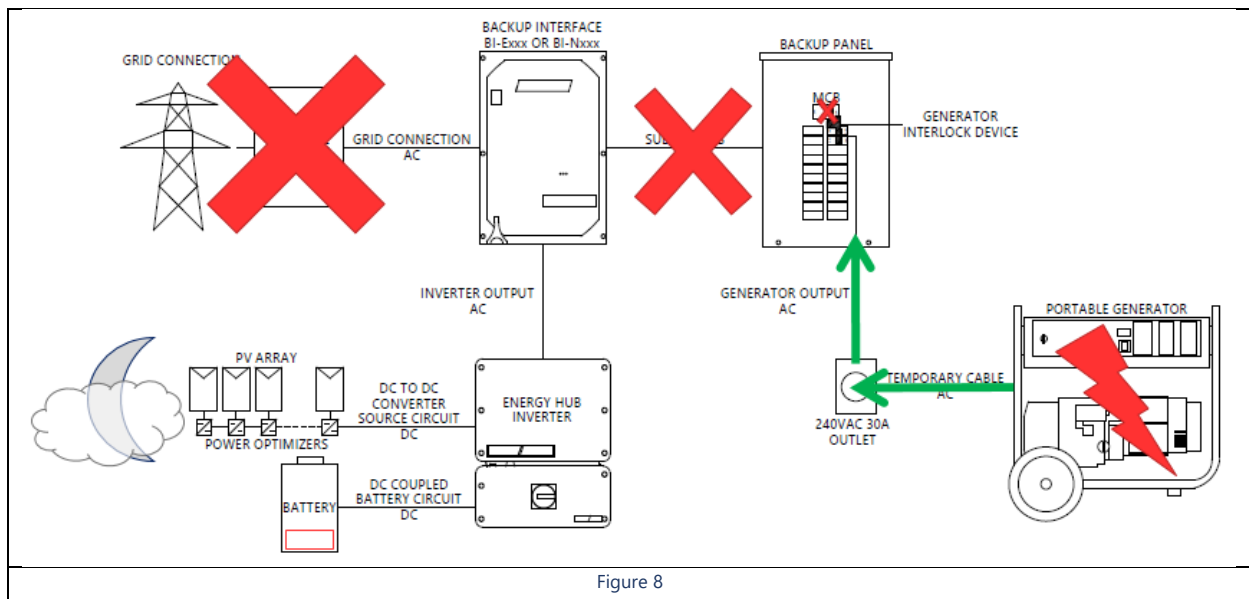


Figure 8

When PV production resumes, the batteries will start to charge. The system operator will have to turn off the generator to provide backup power from the sun. The generator interlock must be switched manually by the user, which will isolate the generator from the inverter. Figures 9 and 10 indicate the flow of power in these states.

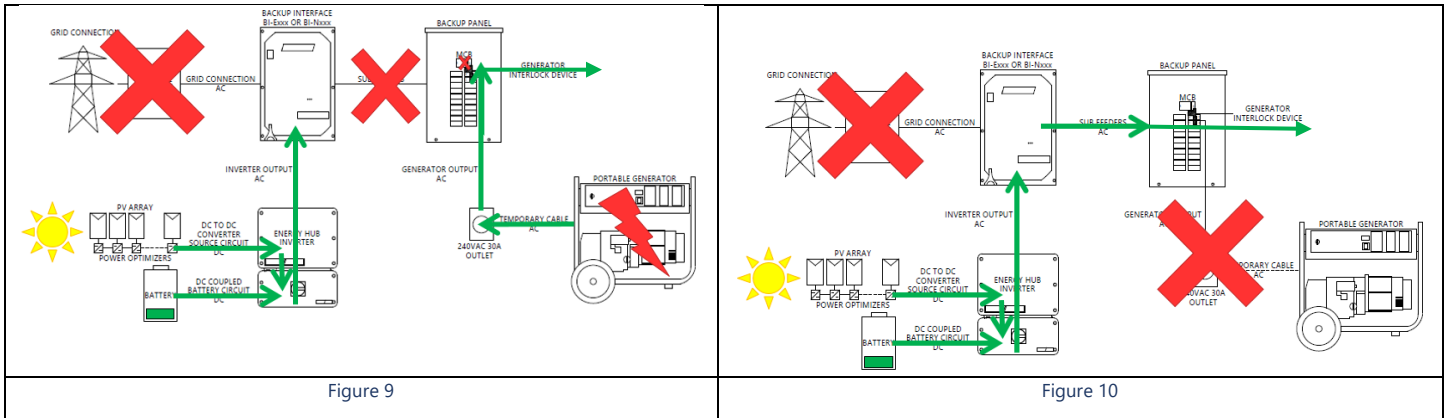


Figure 9

Figure 10

Generators Connected to the Backup Interface with Manual Start

Upon the loss of the Grid, the Backup Interface will isolate from the Grid, and the PV + Storage system will provide power to the backed-up loads. The generator relay that is located inside of the backup interface will remain open upon loss of the Grid. Once the generator is started, and there is voltage signal present on the generator input, the relay for the generator will close ONLY if the grid relay is open (backup mode). The generator is on standby and ready to function independently of the inverter. The Inverter will provide power to the backed-up loads if there is sunlight and/or battery energy. Any non-consumed sunlight will charge the batteries. Figure 11 indicates the flow of power in this state.

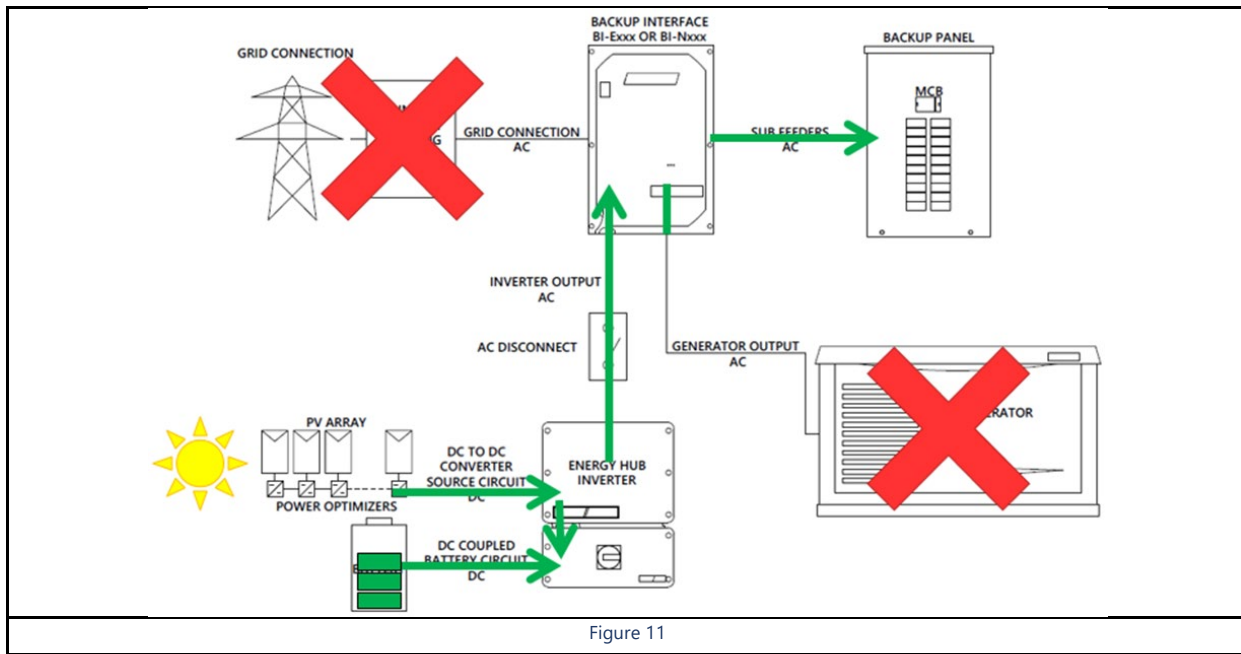


Figure 11

Once the batteries have been depleted and there is no PV production, the system owner will manually turn on the generator to provide backup power to the home loads. Once the BUI recognizes the voltage source from the generator, the relay for the generator will close, and the inverter will disconnect itself from the generator. This will allow the batteries to charge when PV production resumes, even when the generator is running (Figure 12). Note that in this configuration, the inverter will not be able to provide backup power until the grid is restored.

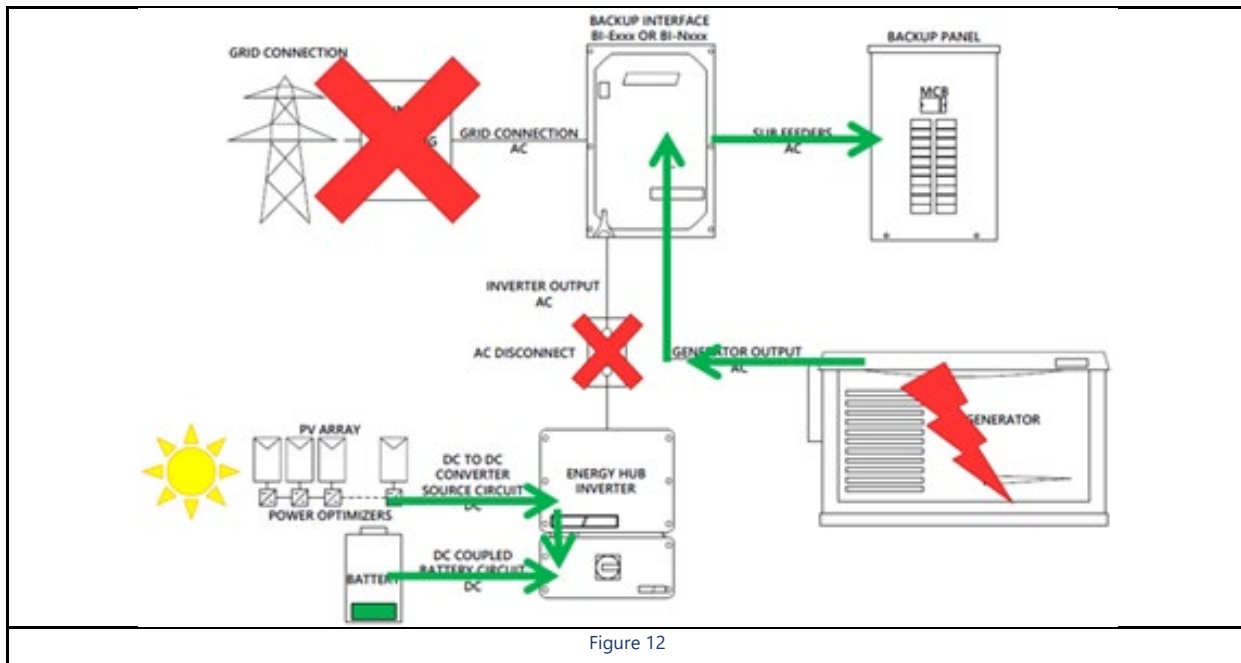


Figure 12

Generators Connected to the Backup Interface with 2-Wire Start / Stop Capability

Upon the loss of the Grid, the Backup Interface will isolate from the Grid, and the PV + Storage system will provide power to the backed-up loads. The generator relay that is located inside the backup interface will remain open upon loss of Grid. The Inverter will provide power to the backed-up loads if there is sunlight and battery energy. Any non-consumed sunlight will charge the batteries. Figure 13 indicates the flow of power in this state.


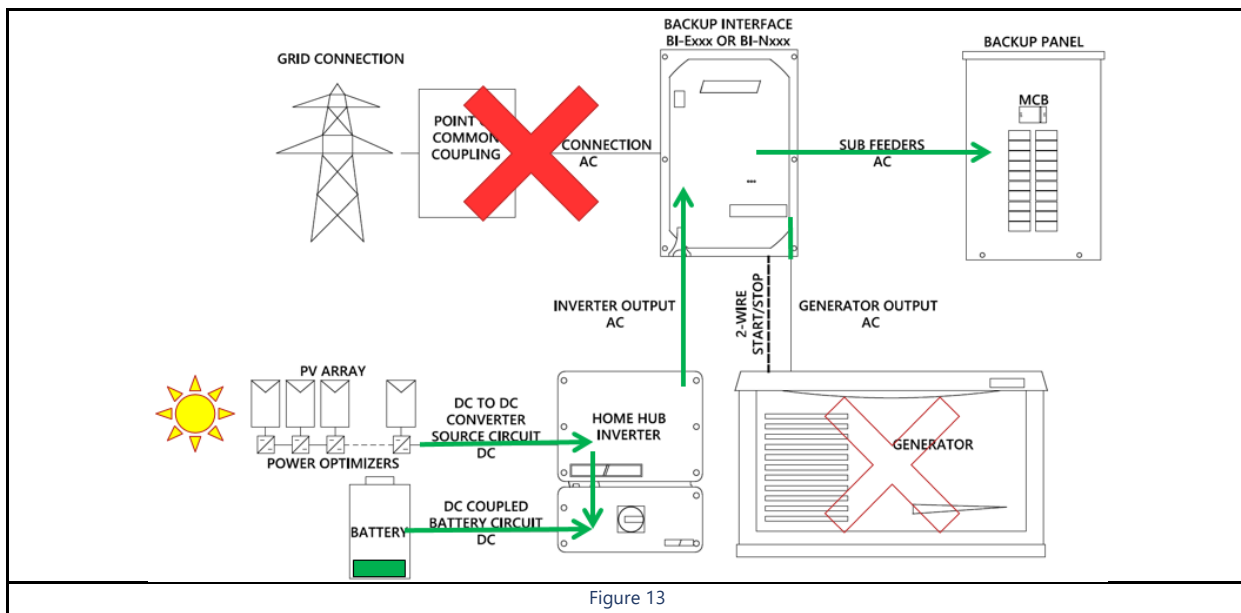


Figure 13


Once the PV + storage system has been depleted, The BUI will send a signal the generator to turn on and start production. When there is voltage sensed on the generator input, the BUI will close the relay on the generator and will allow the generator to provide power to the backed-up loads panel (Figure 14). The Home Hub inverters AC relay will be open electrically isolating it from the generator. The next morning, when PV is available, battery charging will resume

(Figure 15). Once there is sufficient energy in the battery, the BUI will turn off the generator, open the generator relay, and resume backup production from the inverter.

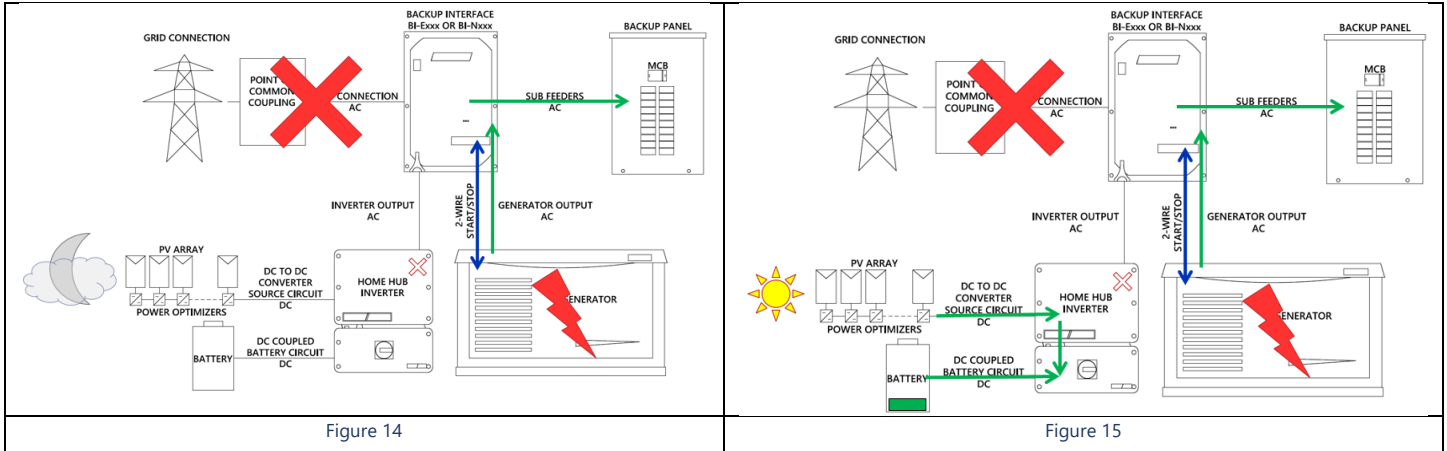


Generators Connected to a 3rd Party Transfer Switch on the Supply Side of the BUI

Upon the loss of the Grid, the Backup Interface is the primary source of backup power, and the generator is secondary. The Backup Interface will isolate from the Grid and the PV + Storage system will provide power to the backed-up loads. The generator's Auto Transfer Switch will remain open to the generator. The generator is on standby and ready to function independently of the inverter. Figure 16 indicates the flow of power in this state.

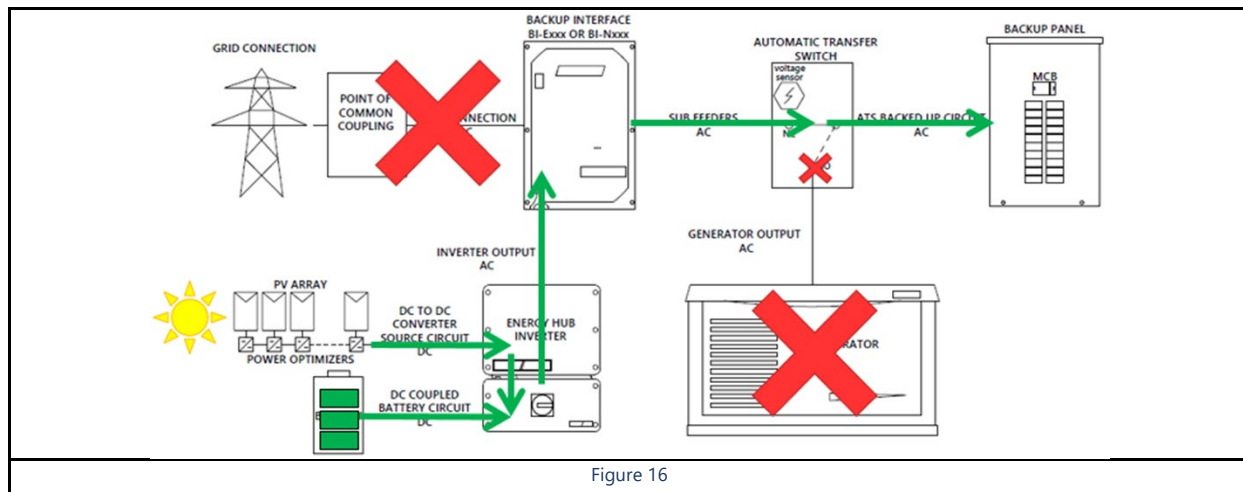

When PV is no longer viable, and the batteries have been depleted, the inverter will go to sleep. The secondary backup system (generator) will kick on to provide power to the backed-up loads. The generator's Auto Transfer Switch will close to the generator and will isolate the inverter and Backup Interface. The inverter will start charging the batteries once there is sufficient sunlight. Once there is a sufficient state of charge in the battery, the inverters AC voltage should signal the 3rd party transfer switch to isolate the generator and allow the PV + Storage system to provide backup power.. Of note, the generator will have to be programmed for a 5min start delay. See figure 17 and 18 for power flow details.

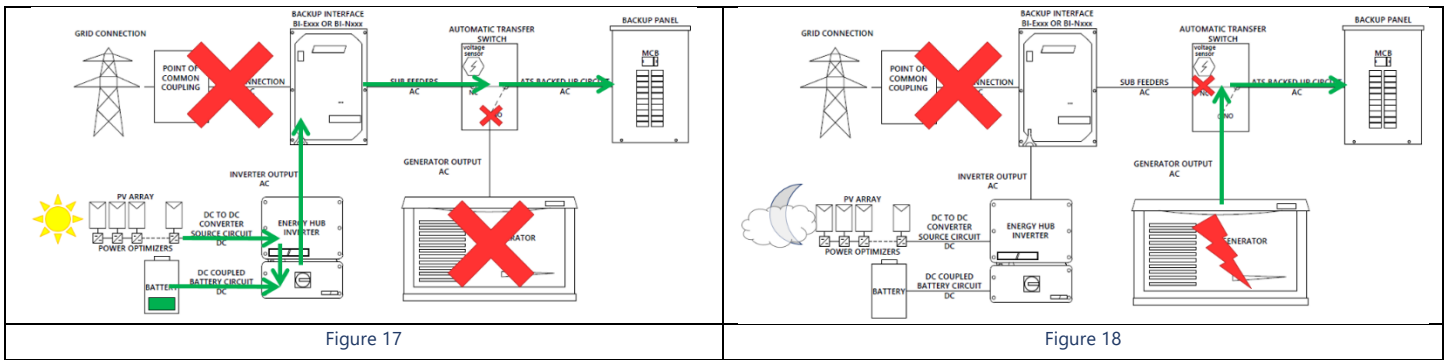

Operational Instructions

This section will instruct the system operator on how to control the generator and the energy storage system for each of the scenarios listed above. The system operator will need intimate knowledge of the location of breakers, disconnects, and power controls for the energy storage system, the generator, and any other auxiliary devices.

Generators Connected to the Backed-up Loads Panel with Manual Transfer Switches or Interlock Devices

- **Portable generators – which usually offer wider frequency ranges and are always 10kW or less**
 Steps to take when a grid outage occurs, and the BUI has transitioned to backup mode:

 1. Allow the energy storage system to operate for as long as possible using PV energy to charge the batteries and power the home loads
 2. Lock the Main Disconnect/Main Breaker into the open/off position once the batteries have been depleted and the energy storage system is no longer supplying energy to the backed-up loads

**Note: the main disconnect will vary from system to system*

 3. Use the generator’s interlock device, or manual transfer switch, to isolate the generator from the BUI
 4. Start the generator per the manufacturer's instructions
 5. Plug the generator into the pre-installed receptacle
 6. Allow the generator to provide backup power to the loads
 7. Optional: when the batteries have sufficient charge, first turn off the generator, and then move the interlock device back to normal operation
 8. When the grid is restored, ensure the generator is off
 9. Remove any locks, and turn on the Main Disconnect

- **Standby generators – which usually provide better frequency ranges, and are usually greater than 10kW**
 Steps to take when a grid outage occurs, and the BUI has transitioned to backup mode:

 1. Allow the energy storage system to operate, if possible, using PV energy to charge the batteries and power the home loads
 2. Lock the Main Disconnect/Main Breaker into the open/off position, once the batteries have been depleted, and the energy storage system is no longer supplying energy to the backed-up loads

**Note: the main disconnect will vary from system to system*

3. Use the generator's interlock device, or manual transfer switch, to isolate the generator from the BUI
4. Start the generator per the manufacturer's instructions
5. Allow the generator to provide backup power to the loads
6. Optional: when the batteries have sufficient charge, turn off the generator and move the interlock device back into normal operation
7. When the grid is restored, ensure the generator is off
8. Remove any locks, and turn on the Main Disconnect

Generators Connected to a 3rd Party Transfer Switch on the Load Side of the BUI

***Note:** Portable generators are not usually used in this application

- **Standby generator connected to the load side of the backup Interface with "Auto Start" functionality**

***Note:** in this case, the generator should be pre-programmed for a 10-second delay start

Steps to take when a grid outage occurs, and the BUI has transitioned to backup mode:

1. Allow the energy storage system to operate, if possible, using PV energy to charge the batteries and power the home loads
2. Once the batteries have been depleted, The generator's Auto Transfer Switch will isolate the generator from the BUI
3. The generator will Auto Start and provide backup power to the loads
4. When the PV + storage system has sufficient energy to resume production, the Auto Transfer Switch will automatically isolate the generator from the backed-up loads
5. When the grid is restored, the system will automatically resume default programming

Safety and Maintenance

It is important to note that generators are noisy, have high operational costs, and require routine maintenance. Follow the generator manufacturer's instructions for monthly or yearly maintenance. The SolarEdge BUI and Home Hub inverters were designed and built to be maintenance-free. However, it is recommended that the backup system is tested yearly to ensure functionality and operational behaviors. While this document does cover the most common generator applications, there are other system setups that are not supported and could result in damaged equipment and voided warranties.