



SolarEdge Home Battery 400V

Installation on StorEdge Inverter

Connection via Home Network

Revision 1.5 March - 2023

solar**edge**

Distance, cables & Part Numbers

Technical data and Part Numbers

PN - HD WAVE	INVERTER DESCRIPTION - TECHNICAL SHEET HERE
SEXXXXH-XXXXXBXX4	StorEdge Single-phase inverter with HD-Wave technology, Inverter with SetApp configuration



PN - ACCESSORIES	DESCRIPTION
IAC-RBAT-RWYCBL-01	SolarEdge Energy Bank Branch Connector set (10 pairs in a box)
IAC-RBAT-HANDLE-01	SolarEdge Energy Bank Mounting Handles (4 handles in a box)
IAC-RBAT-FLRSTD-01	SolarEdge Energy Bank Floor Stand

*Even the SetApp inverters with meter and integrated Sesti are compatible with the SolarEdge Home Battery 400V.

Allowed distance between inverter & batteries

The maximum distance allowed between the inverter and the battery is 50m

In the case of Multi-Inverter and Multi-Battery systems, the maximum distance of 50m should be understood as the distance between the Leader inverter and the physically farthest battery

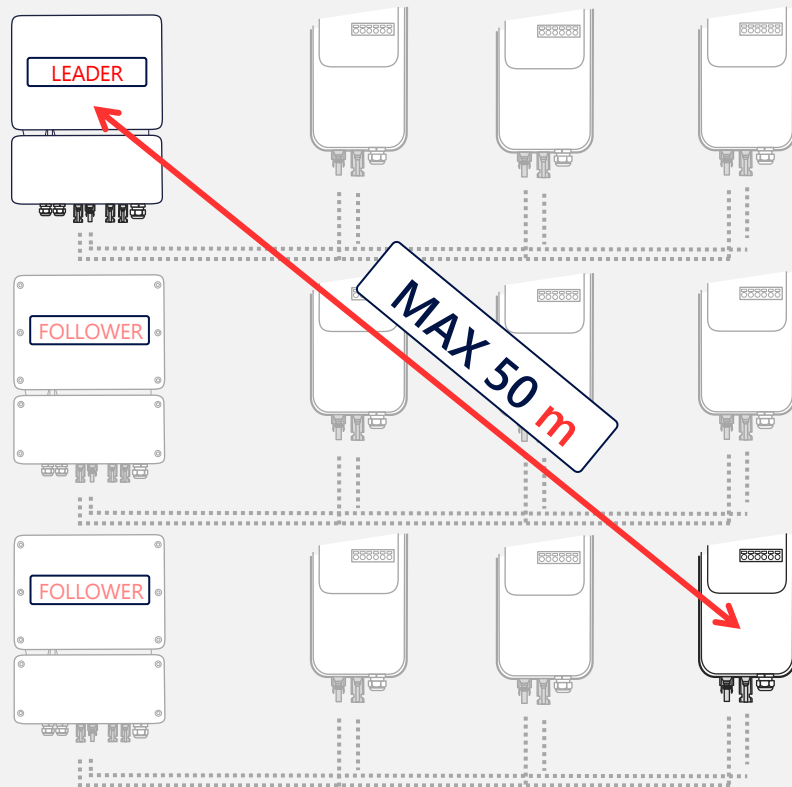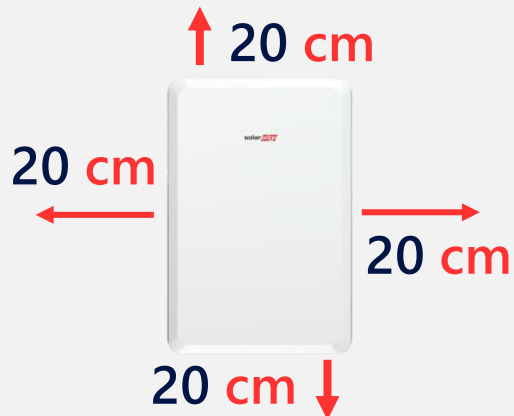

Communication and power cable specifications

INVERTER / METER Communication	Cable Type
Type of connection cables between Inverter and Meter	Shielded cable with at least 3 twisted conductors with a section of 0.2–1 mm ² . A CAT 5/6 STP cable can be used
INVERTER / METER Communication	Max Distance
Max distance of RS485 cable between inverter and meter	100 m with category 5/6 cable
	1000 m with RS-485 category cable
DC CABLES BATTERY/INVERTER	CABLE TYPE
Type of DC cables between the battery and Inverter	6 mm ² (6–10 mm ²), 600 V insulated
Type of grounding cable	6 mm ² (6–10 mm ²)

Please Note: The connection must use twisted cables for terminations A & B (eg. the Blue cable for A & the White/Blue for B). We recommend the use of Cat5/6 shielded Ethernet cable with the same colors shown in this manual

Power on & off



Attention


The «SolarEdge Home Battery 400V» must be turned off before installation. Failure to follow the correct battery shutdown/ignition procedure may damage the product. This type of damage, deriving from installation negligence, puts the product out of warranty.



The SolarEdge battery communicates with the inverter via Home Network. **This type of communication excludes the wired RS485 connection**

ON/OFF/P Switch

Disconnecter

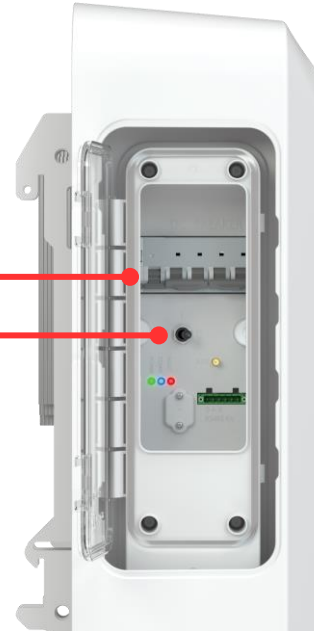


Inverter and battery shutdown procedure

- 1 – Set the inverter **Switch P/1/0** to **0**
- 2 – Check that the inverter **V_{dc}** reaches a **safety voltage** (less than 50V)
- 4 – Turn the battery **ON/OFF/P Switch** to **OFF**
- 5 – Set the battery **disconnector** to **OFF**

Battery & inverter start-up procedure

- 1 – Make sure that the **inverter Switch P/1/0** is in position **0** & the V_{dc} is less than 50v
- 2 – Set the **battery disconnector** to **ON**
- 3 – Turn **ON** the battery **ON/OFF/P Switch**
- 4 – Set the inverter **Switch P/1/0** on **1**

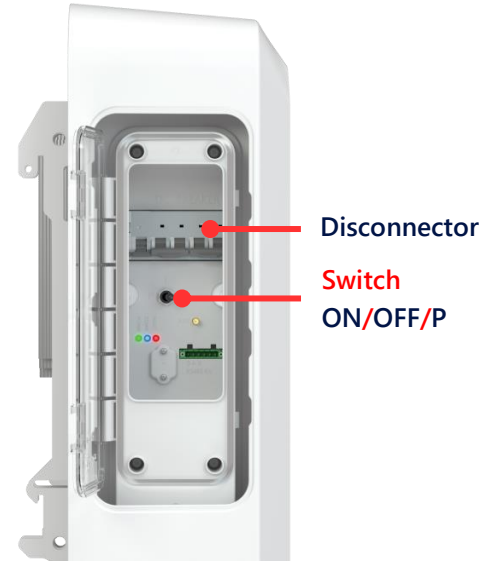

DC wiring




Attention

Before wiring the battery and the inverter, please perform the **shutdown procedure** indicated on page 8 of this manual.

We then invite you, in order to have a clearer view of the installation **to wiring the battery using the same colors** used in this guide.


Once the wiring has been completed, it is also extremely important to make sure that the polarity has not been reversed. **A reversed polarity may result in the invalidation of the product warranty.**


 The following pages show different connection modes between inverter & battery depending on the various installation possibilities: An inverter with a battery, an inverter with a maximum number of 3 batteries in parallel and finally several inverters in Leader/Follower connection all with a maximum number of 3 batteries per inverter in parallel.


For the configuration of your system, please refer to the pages of your interest only. In the event of Multi-Inverter/Multi-Battery connection, the search, pairing, updating, and self-test of the batteries must all be performed by the leader inverter.


Configuration 1: DC connections on single battery



DC connection of the batteries to the inverter

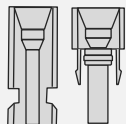


 The SolarEdge Home battery must be connected, to the StorEdge inverters using the **connectors dedicated to the StorEdge** and not those for the PV strings.





 For the DC connection use 6mm² (6-10mm²) 600v insulated cable. Connect the ground cables as indicated in the "Quick Installation guide".

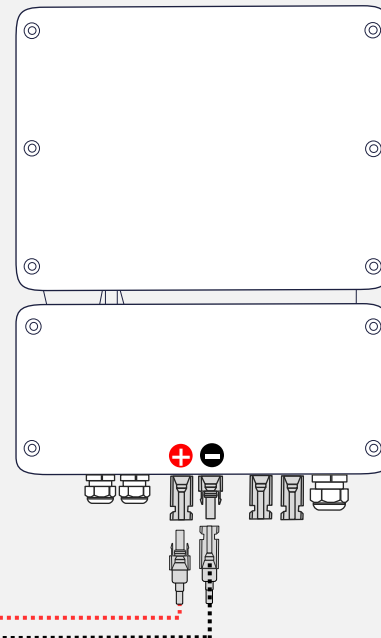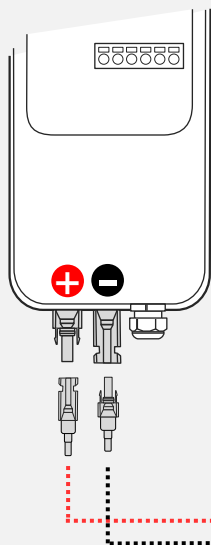



DC connections of the batteries to the inverter




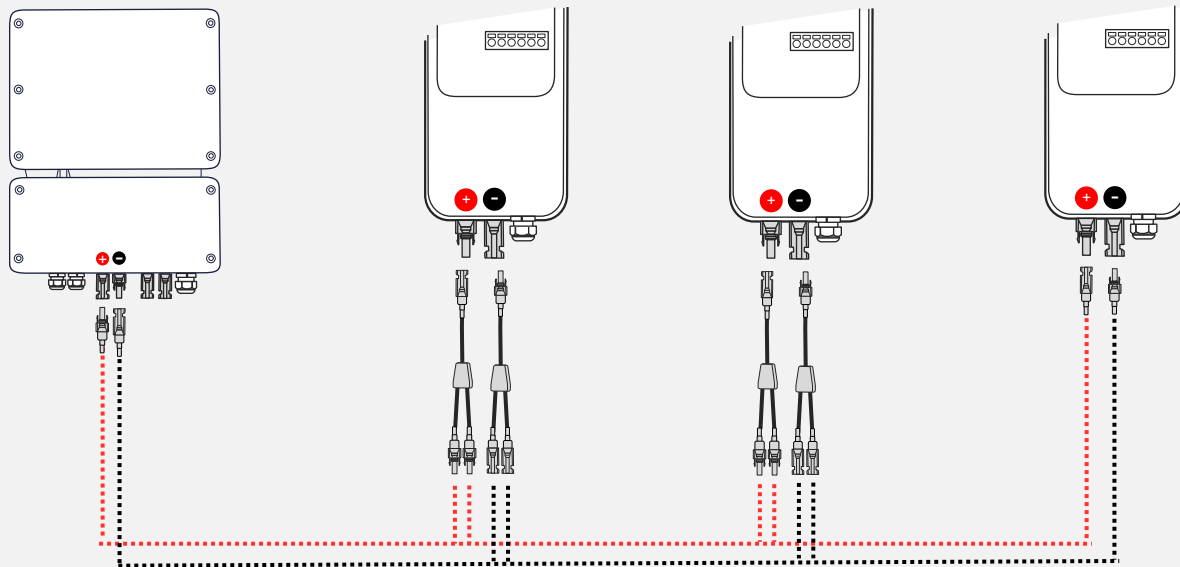
 SolerEdge Home batteries communicate with the inverter via an Home Network device. The only cable connections required with the inverter is the DC one



 For the DC connection use a 6mm² (6-10mm²) 600v insulated cable, Connect the ground cables as indicated in the "Quick Installation guide"




 We recommend using SolarEdge cables for parallel connection of batteries with PN: IAC-RBAT-RWYCBL-01




Create a Leader/Follower Communication

1



Use RS485-2 communication BUS for the Leader/Follower connection between the inverters


Shielded cable with at least 3 twisted conductors with a section of 0.2-1mm². A CAT5/6 STP cable can be used

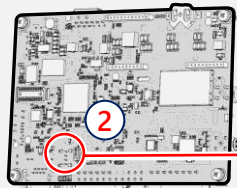

2






Set the SW2 DIP switch to ON (high) to terminate the first and last inverters on the RS485 bus

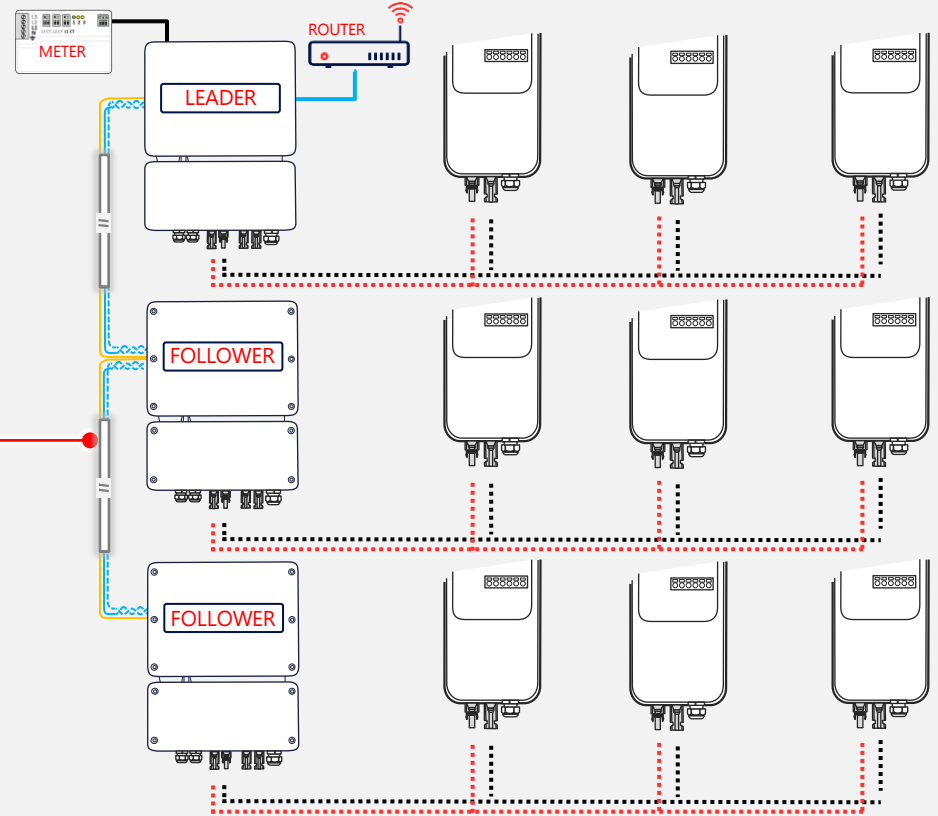

Configuration 3: Connections in Multi-Inverter/Battery Systems

Complete the Leader/Follower detection via SetApp

Connect to the first or last inverter in the chain, as indicated on page 13, to set the Leader inverter.

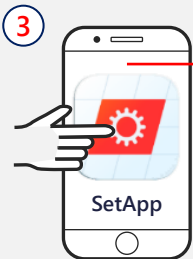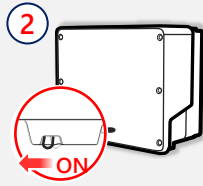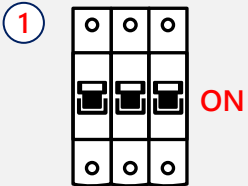

- Site Communication
- RS485-2
- Protocol – SolarEdge Follower
- Protocol – Follower
- SolarEdge Leader
- Follower Detect

The screenshots show the following steps:

- Commissioning**: The 'Site Communication' option is highlighted in red.
- Site Communication**: The 'RS485-2' option is highlighted in red.
- RS485-2**: The 'Protocol' dropdown is set to 'SolarEdge Follower' and highlighted in red.
- RS485-2 Protocol**: The 'Protocol' dropdown is set to 'Follower' and highlighted in red.
- RS485-2 Protocol Role**: The 'SolarEdge Leader' option is selected and highlighted in red.


The next three screenshots show the 'Follower Detect' process:

- RS485-2 Protocol**: The 'Follower Detect' option is highlighted in red.
- Follower Detect**: Shows '0 Followers detected' and a 'Performing Follower Detect' status with a 'Stop' button highlighted in red.
- Follower Detect**: Shows '0 Followers detected' and 'Follower Detect Completed' with a 'Done' button highlighted in red.


Commissioning

Installing the plug-in card for Home Network

Attention


 Installation of the plug-in card for SolarEdge Home Network can only be done by a qualified installer.

In case of Multi-Inverter/Multi-battery installation, **each inverter must** be equipped with an Home Network board.


 To avoid electric shock, refer to the safety instructions in the inverter installation guide before removing the inverter cover

1. Inverter & Battery shutdown process

1 Turn off the inverter ON/OFF/P switch and the DC safety switch (if applicable)

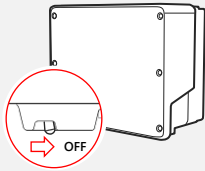


2 Wait 5 minutes

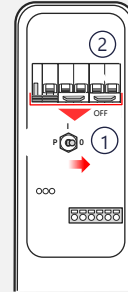

3 **Turn OFF the battery**
Turn the battery ON/OFF/P switch to OFF
Set the battery disconnecter to OFF.




4 Turn off the AC power to the inverter on the main power panel.

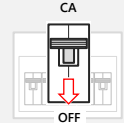


2. Antenna installation

1 Open the covers of the inverter & connection unit (if applicable)



2 Hook the antenna (supplied) to a fin of the heatsink

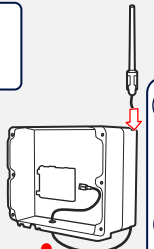

3 Pass the antenna cable through a communication cable gland.

3. Install & connect the plug-in board




ENET-HBNP-01


1 Connect Home Network plug-in board to the dedicated socket on the communication board for each battery inverter
2 Connect the antenna to the Home Network plug-in card.

ENET-HBCL-01

3 Secure the antenna cable to the communication card bracket with a plastic tie (supplied).

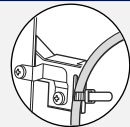

4 Replace the covers of the inverter and connection unit (if applicable). Torque the screws to 8.4Nm / 74lb



Attention




Please pay particular attention to the ignition process of the products. The SolarEdge battery must be turned ON before the inverter, according to the methods indicated alongside



Make sure that your phones **GPS** and its **internet connection** are enabled in device settings

4. Switching on the devices following the order

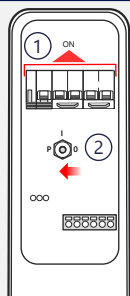
**1****Turn ON the battery**

Set the battery disconnecter to ON


Turn ON the battery ON/OFF/P switch

2


Turn on the AC power to the inverter on the main power panel

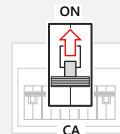**3**

Turn on the inverter ON/OFF/P switch and DC safety switch (if applicable)

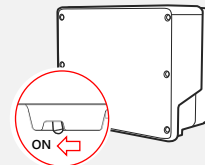

5. Check for errors

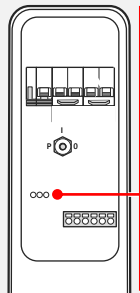
**Power****Flashing**
Charging/Discharging**Flickering**
Standby/Pairing**Comm.****ON**
Communication OK**Flashing**
In search of network**Error****ON**
Error**Fast flashing**
Firmware update**All LEDs ON**
Start/Reset

With the SolarEdge Home battery turned on, before powering the inverter, make sure that **no red lights are on** but that the blue light is flashing

If there is a red error light, please **move the ON/OFF/P switch to P for 5 seconds**.

Once the error has disappeared, turn the battery off & on again as described above.

6. Connection via SetApp & Battery Communication Check

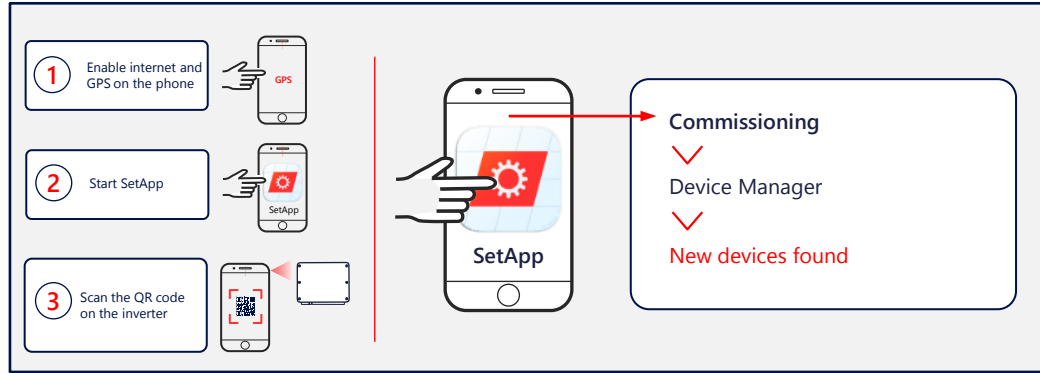


⚠ Important Notice

The SolarEdge Home battery **must not be added** in the system «Site Communication» menu but is automatically identified under the device management menu. When this happens, the item «New devices found» is visible in red.

If this wording is not visible, the battery is not communicating and you must:

- 1 – Check the correct installation of the Home Network Board
- 2 – Repeat the procedure described on page 16

7. Check the correct installation of the Home Network board

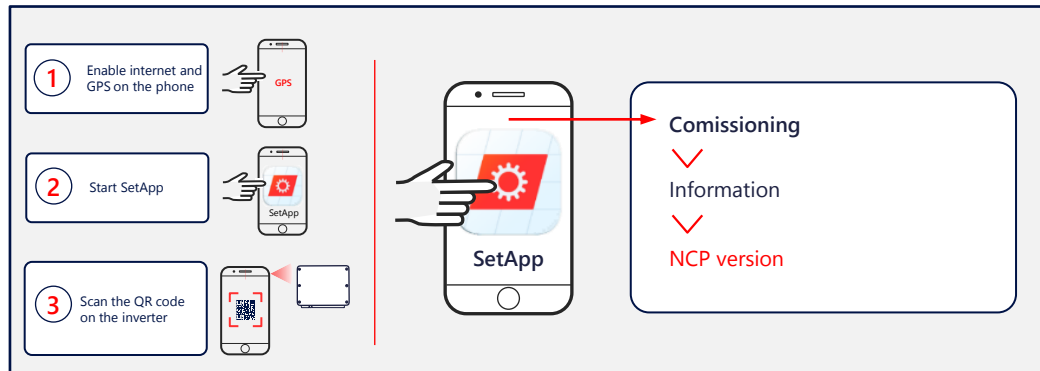

To check the correct installation of the Home Network board, just go to the information item from the main menu of the SetAPP application and check that the wording «NCP version» is present. If this is not indicated, it is likely that the card is not installed correctly

SetApp Configuration

From the leader inverter

SetApp: Adding devices and battery update

20

The SolarEdge Energy Bank battery **must not be added** in the «Site Communication» menu but is automatically identified under the device manager menu. When this happens, the item «**New devices found**» is visible in red. In Multi-Inverter/Multi-Battery systems, the procedure for updating all batteries **is performed by the leader inverter**.





The battery update, via Home Network, can take up to 20 minutes to complete, for each battery.

Controller	Installed	New
StorEdge		
SEDG Comm	1.0.20	1.0.67
SEDC DCDC	0.0.60	0.0.79
SEDC BMS	0.5.70	0.6.5

SetApp: Association process






The SolarEdge Home battery is associated with the corresponding inverter in DC. If the association fails, we invite you to double-check the DC wiring, connectors, and polarity, before making a new pairing

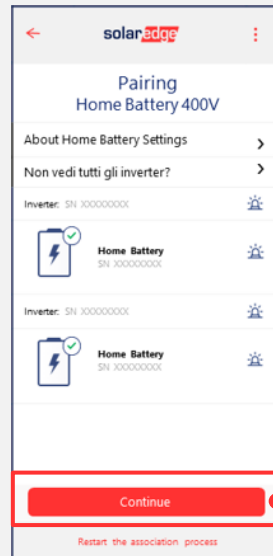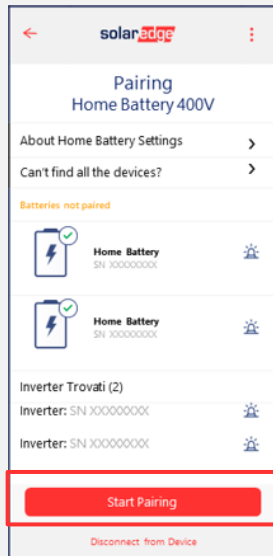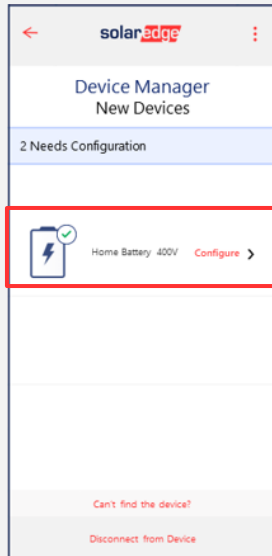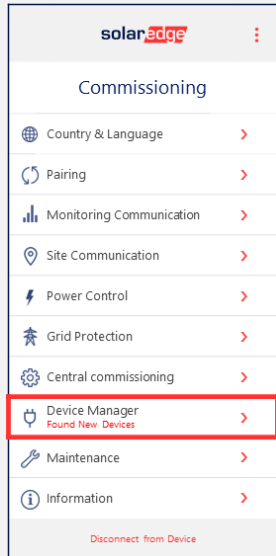

It takes 5 minutes to complete the association of the battery with the inverter. Should the association fail, we invite you to disconnect from the application and connect again after double-checking the DC wiring.

SetApp: Battery self-test and Control Mode

Start the battery self-test to verify correct charging, discharging, and communication. In Multi-Inverter/Multi-Battery systems, the self-test procedure for all batteries is **performed by the Leader inverter.**

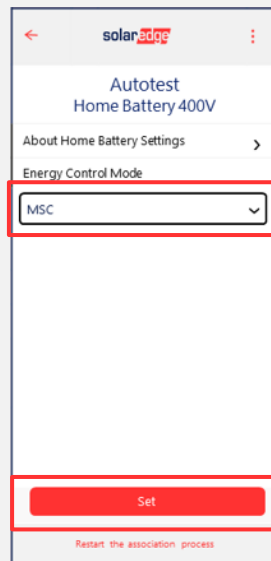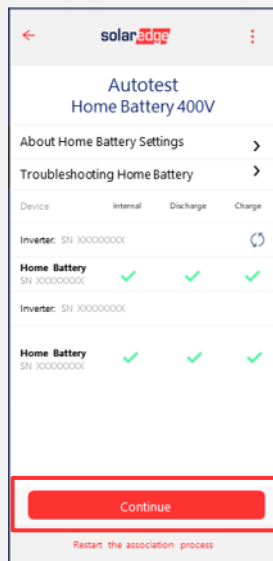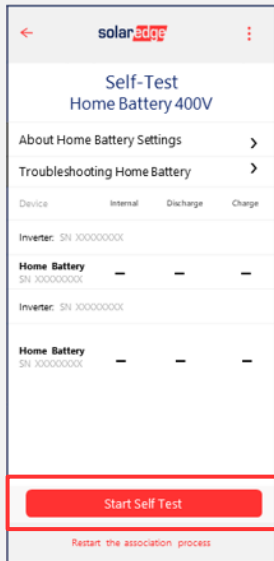


Set the battery operation mode to **Maximum Self Consumption (MSC)**. Then check from the status section that the batteries have started working.

Disconnection

SetApp: Disconnection from the inverter

Once the commissioning of the inverter and battery has been completed, it is important to disconnect from the inverter, using the appropriate button of the application. Only in this way, in fact, will the monitoring portal be updated with the new components installed.

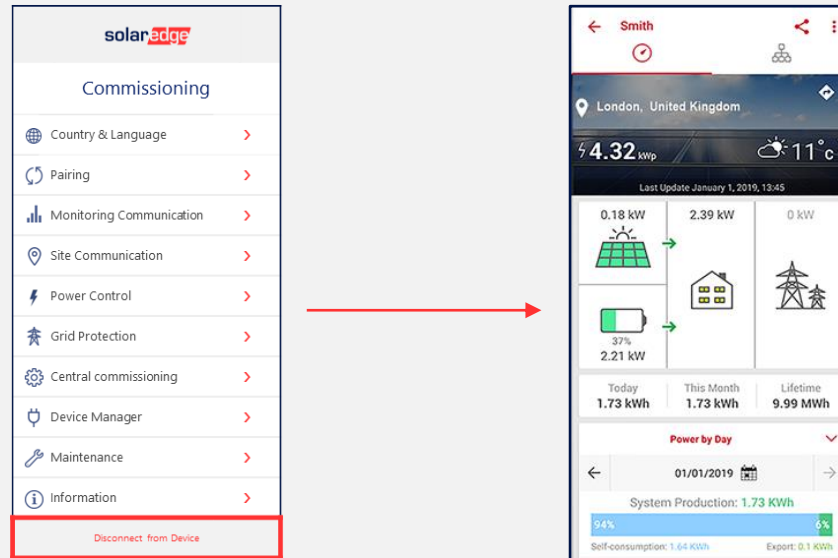

Thank You!

Cautionary Note Regarding Market Data & Industry Forecasts

This power point presentation contains market data and industry forecasts from certain third-party sources. This information is based on industry surveys and the preparer's expertise in the industry and there can be no assurance that any such market data is accurate or that any such industry forecasts will be achieved. Although we have not independently verified the accuracy of such market data and industry forecasts, we believe that the market data is reliable and that the industry forecasts are reasonable.

Version #: V.1.0

Version #: 12/2018/EN ROW

solaredge